



A. Models 107, 114, 115, 116 and 123

For removal or installation of holding spring, compress ring by means of universal pliers (arrows).

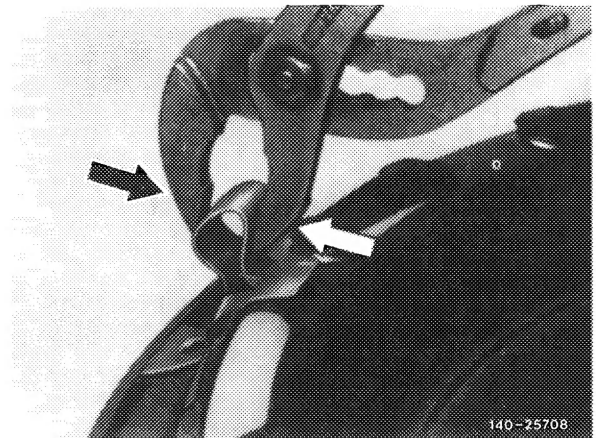

Attach four holding springs to cover spaced 90° apart.

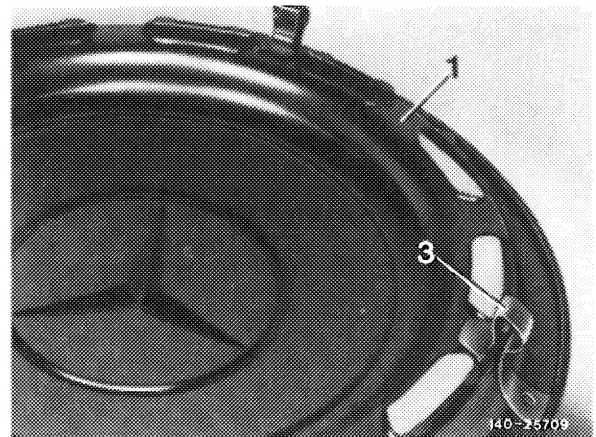

- 1 Wheel cover
- 3 Holding spring

B. Model 126

For removal or installation of annular spring, compress spring and pull out or introduce each at slots of cover.

